

Frozen Drink Machine Safety Instructions

- 1) The Vevor frozen drink machine is fragile; please use care. Keep the machine upright. Do not incline more than 30° and DO NOT invert or place horizontally.
- 2) Do not place items around the machine to block airflow. Allow sufficient ventilation.
- 3) Danger of electric shock: Machine must be used under cover to be protected from direct sunlight and rain. Machine should never be used in the rain as this may result in electric shock. Machine should never be sprayed with water as this may result in short circuit and/or electric shock.
- 4) Do not insert any metal items into the machine.
- 5) The machine weighs 94 pounds. Place the machine on a very solid surface to prevent overturning.

***WARNING: If you are only using one side of the drink machine, do not turn on the second side.

Frozen Drink Machine Operation Instructions

***NOTE: When set up is complete, it takes approximately 45 minutes to produce frozen drinks so give yourself plenty of time. To remove tank lids, lift the back of the lid, pull toward you slightly and lift in front. Do not force.

- 1) After setting machine on solid surface and ensuring that air flows freely, pour in enough VERY COLD 2-liter drinks to fill between the minimum and maximum fill lines. Six liters of drink (three 2-liters) will fill to the minimum line. Twelve liters of drink (six 2-liters) will fill to the maximum line. If both tanks are filled to the maximum line, you will produce approximately 110 seven-ounce frozen drinks. To reduce processing time, you may want to place 2-liter drinks in your freezer until very cold/almost frozen. The colder the drinks, the faster the process. However, frozen material cannot be used in the machine.
- 2) Once filled, plug up and turn on the machine. When you turn on the machine, you will see a blank display screen. Facing the machine, the tank on the right is #1 and the tank on the left is #2. If using only one tank, use tank #1 on the right.
- 3) Press the bowl 1 mix button. The mix function starts and the mix indicator light of bowl 1 is on.
- 4) If using both tanks, press the bowl 2 mix button. The mix function starts and the mix indicator light of bowl 2 is on.
- 5) Press the bowl 1 slush button. The bowl 1 slush function starts, the mix motor works, and the refrigeration system starts. The sound of the compressor indicates that the machine is in freezer mode. When drinks are frozen adequately, the compressor will turn off. If the machine begins to get too warm to keep the drinks frozen, the compressor will turn on again. Do not use the machine in the “cold drink” mode.
- 6) Repeat step 5 with bowl 2 if using both tanks.

*****IMPORTANT:

The most difficult part to operating the machine is the possibility that temperatures may need to be adjusted. Temperature should be maintained at 1.5 °C (32° F) for the proper consistency. If the product is too thin, adjust the temperature to be just slightly colder. If the product is too thick/chunky, adjust the temperature to be just slightly warmer. Any adjustment should be very slight – do not make big adjustments in temperature. To adjust temperature, press the Set button for 5 seconds. S1 is the temperature setting for tank 1, S2 is the setting for tank 2.

Cleaning Instructions:

- 1) Empty any remaining sherbet into a container by pulling the handle/lever.
- 2) Turn off the machine.
- 3) Pour a full bucket(s) of very warm water into each side of the machine that was used. Fill to the maximum line to be sure machine is cleaned completely.
- 4) Press corresponding mix button and let stirrer operate for 1 minute.
- 5) Release water into bucket and discard.
- 6) Turn off machine.
- 7) Completely dissolve 3 tablets in a second full bucket of very warm water (for each side used), pour water into tank(s) to maximum level, and press stirrer and stir for 2 minutes.
- 8) Release water into bucket and discard.
- 9) Turn off the machine.
- 10) Pour a third bucket of very warm water into each side that was used.
- 11) Press corresponding stirrer and let stir for 1 minute.
- 12) Release water into bucket and discard. All traces of colored drink material should be removed.
- 13) Turn off and unplug machine.
- 14) Wipe front, sides, lids, and inside top part of tanks with clean damp cloth.
- 15) Round catch basins can be emptied, cleaned, and returned in Ziplock bag.